


INSTALL VAPROFLASHING @ SILL
DO NOT ATTACH LOWER 6"
EDGE @ THIS STEP. ATTACH WITH
STAPLES OR AS REQUIRED BY BUILDING TYPE.

STEP 1 OF 10.

PROTECT WALL ASSEMBLY FROM MOISTURE.

NOTES:

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. ALL DIMENSIONS ARE CONSIDERED TRUE AND REFLECT MANUFACTURER'S SPECIFICATIONS.
3. CONTRACTOR'S NOTE: FOR PRODUCT AND COMPANY INFORMATION VISIT www.CADdetails.com/info REFERENCE NUMBER 4110-200.

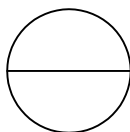

METHOD A - WINDOW WRAP INSTALLATION SEQUENCE
FLANGED WINDOW